

Fuse Holder SERIES

EPF-32 Series Fuse Holder




EPF-63 Series Fuse Holder

EPF-125 Series Fuse Holder



EPF - 32 Series

Fuse Holder and Links

| | |
|---------------------------------------|--|
| Standard | IEC 60947-3 |
| Description | Fuse switch disconnecter with LED indicator |
| Number of Poles | 1P,2P,3P,4P |
| Fuse size | 10X38 |
| Rated operational current Ie(A) | 2-32 |
| Rated operational voltage Ue | AC 250V(1P)/AC 500V(2P-4P) |
| Rated insulation voltage(V) | AC 500 |
| Rated impulse withstand voltage(kV) | 4 |
| Conditional short-circuit current(kA) | 20 |
| Utilization category with fuse | g G |
| Protection degree | IP20 |
| Mounting method | Din rail installation |
| Certification |    |



EPF-32-1P



EPF-32-2P







EPF-32-3P



EPF-32-4P

EPF - 32 Series

Fuse Holder and Links

| | Code NO. | Fuse link size | Link current | Packing unit (holder) | Packing unit(link) |
|--|-----------------------|----------------|--------------|-----------------------|--------------------|
|  <p>EPF-32-1P</p> | EPF-32-1 EPF-32X-1 | 10X38mm | 2A | 12 | 200 |
| | | | 4A | | |
| | | | 6A | | |
| | | | 10A | | |
| | | | 16A | | |
| | | | 20A | | |
| | | | 25A | | |
| | | | 32A | | |
|  <p>EPF-32-2P</p> | EPF-32-2 EPF-32X-2 | 10X38mm | 2A | 6 | 200 |
| | | | 4A | | |
| | | | 6A | | |
| | | | 10A | | |
| | | | 16A | | |
| | | | 20A | | |
| | | | 25A | | |
| | | | 32A | | |
|  <p>EPF-32-3P</p> | EPF-32-3 EPF-32X-3 | 10X38mm | 2A | 4 | 200 |
| | | | 4A | | |
| | | | 6A | | |
| | | | 10A | | |
| | | | 16A | | |
| | | | 20A | | |
| | | | 25A | | |
| | | | 32A | | |
|  <p>EPF-32-4P</p> | EPF-32-4 EPF-32X-4 | 10X38mm | 2A | 3 | 200 |
| | | | 4A | | |
| | | | 6A | | |
| | | | 10A | | |
| | | | 16A | | |
| | | | 20A | | |
| | | | 25A | | |
| | | | 32A | | |